

Installation Manual

Multimastic C




1




Make sure that the service penetrations and aperture are free from dust, dirt and grease. Moisten the construction, if necessary.

6

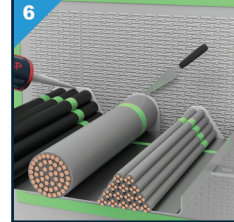


Stick the service penetrations off with tape, over a distance of 50 mm. Then fill the joints and openings around the service penetrations and the construction with Multimastic SP mastic and smooth the joint with a moist spatula or filler knife.

2

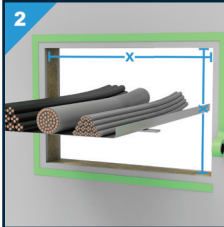


Paste tape around the gap, 25 mm from the edge. Then measure the aperture and service penetrations and draw it on the rock wool Multimastic FB firestop board.

7




Take the bucket Multimastic C firestop coating and stir well before use.

3

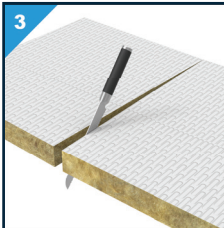


Cut or saw the Multimastic FB firestop board to the desired size.

8

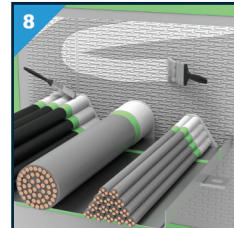

Cover the service penetrations with Multimastic C over at least 50 mm and completely paint the Multimastic FB firestop board with a brush or roller.

4




Cut or saw the service penetrations from the Multimastic FB firestop board.

9




Remove the tape for a nice and tight appearance.

5

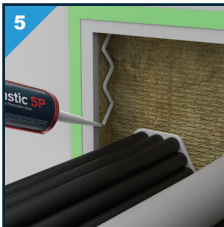

Glue Multimastic FB firestop board with Multimastic SP mastic into the construction and with the service penetrations.

10



Fill in the conformity statement card and paste it next to the penetration seal.

Information



For use and for more information about an application, refer to the Mulcol documentation, local and international approvals. See the **Mulcol Fire Protection app** for the correct application in combination with fire resistance, or use our selector at www.mulcol.com For professional use only.

